



Exploded View

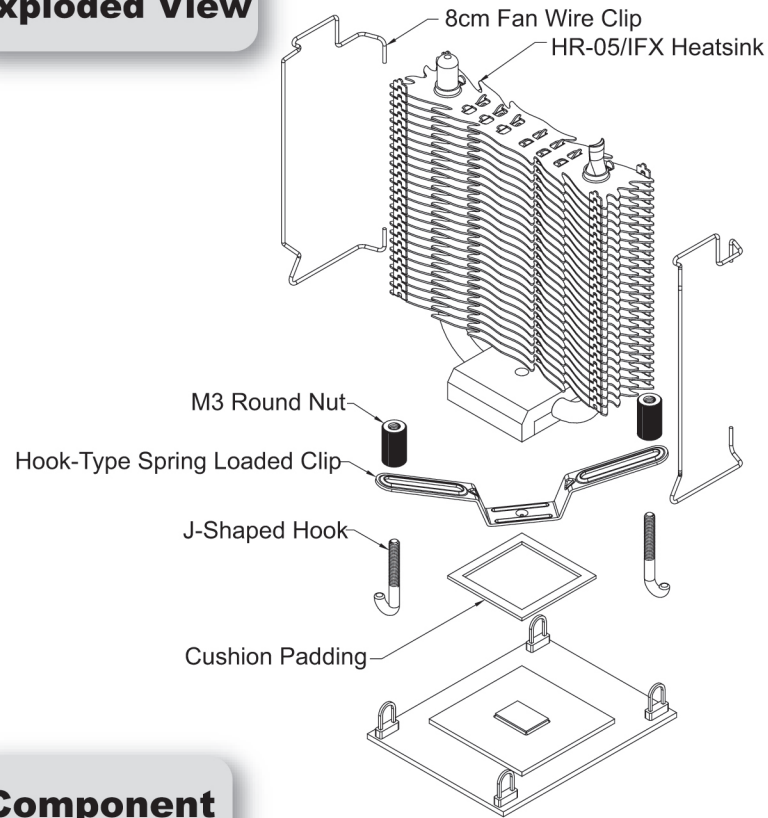










Component

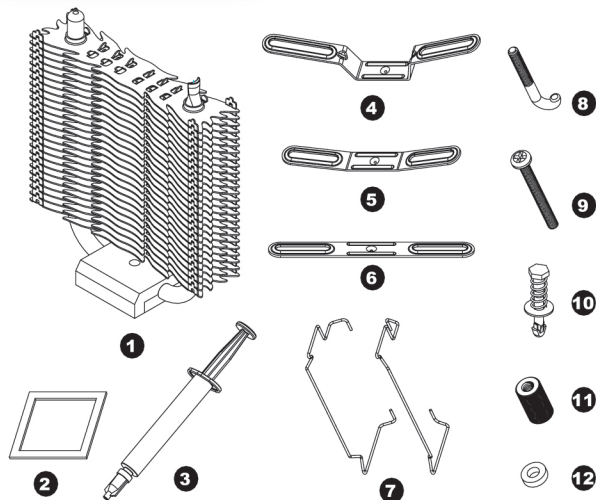

Parts Name	Piece(s)
① HR-05/IFX Heatsink	1
② Cushion Padding	1
③ Thermal Paste	1
④ Hook-Type Spring Loaded Clip	1
⑤ Push-Pin-Type Spring Loaded Clip	1
⑥ Push Pin Metal Clip	1
⑦ 8cm Fan Wire Clip	2
⑧ J-Shaped Hook	2
⑨ M3 Screw	2
⑩ Push Pin	2
⑪ M3 Round Nut	2
⑫ Screw Washer	2

Installation

 Important! Before proceeding with installation, please check for the most up-to-date instructions at www.thermalright.com

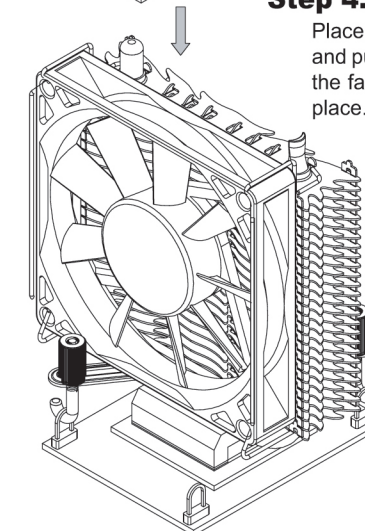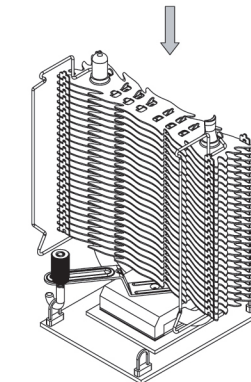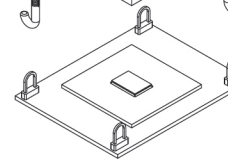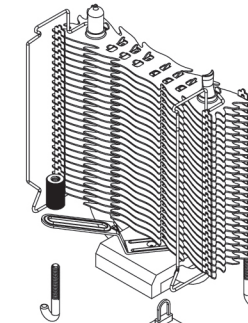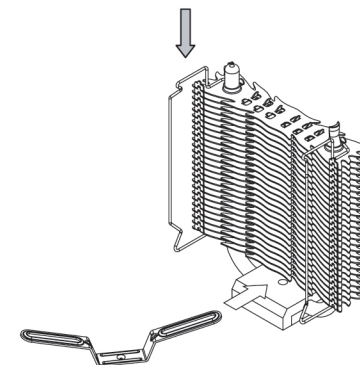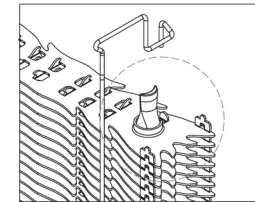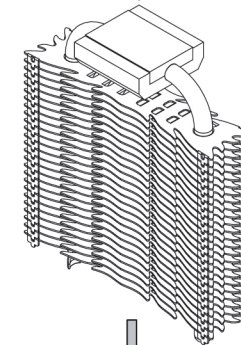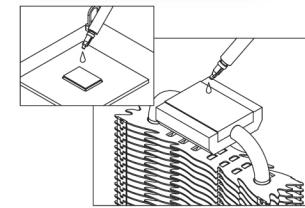

Step 1: Thermal Paste Application

Apply an even layer of thermal paste to the north/southbridge chipset and to the bottom of heatsink base.

Step 2: Cushion Padding Application

Apply cushion padding to the bottom of heatsink base and then insert each end of fan wire clips to the designated holes (as circled in the illustration) on the fins.

Step 3: Retention Mechanism Installation

Slide the hook-type spring loaded clip through the heatsink between the heatpipes and have the dome on the clip inside the socket located on top of the heatsink base. Then insert the J-shaped hooks through the slots on each end of the spring loaded clips and hook into the horseshoe loop. Using the M3 round nuts to secure in place.

Step 4: Fan Installation

Place any 8cm fan to the heatsink body and pull on the fan wire clips to hook into the fan mounting holes to secure fan in place.